CordLift WireFree[™] Visual Reference Guide CL32 Pleated and Cellular Shades



STEP 1
Initiate programming
by pressing both the

(Up) and (Down)
buttons at the same
time until the
shade jogs.



STEP 2
Check the direction of operation. Press and hold the button and confirm it moves the shade down (the motor will be in momentary fashion). To change the

fashion).To change the direction press and hold the (Stop) button until the shade jogs.



STEP 3



STEP 4
Press and hold the
and buttons
until the shade
begins to move up.
The shade will stop
at the original
upper point. Adjust
if necessary.




STEP 5
Press and hold the wo button until the shade jogs to confirm the limit setting.



STEP 6

Press and hold the **Program** button on the back of the transmitter until the shade jogs. It will now operate in a maintained fashion. Double check limits as a precaution.

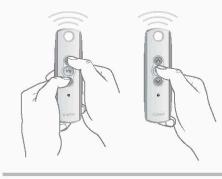

TO ADJUST LIMITS

To change the lower limit: Move the shade to its current lower limit position and let it stop. Press the ♠ and ♦ buttons simultaneously until the shade jogs, then release. Adjust to a new lower limit position. Press the ♠ button until the shade jogs, then release. Check new limit.

To change the upper limit: Move the shade to its current upper limit position and let it stop. Press the ♠ and ♠ buttons simultaneously until the shade jogs, then release. Adjust to a new upper limit position. Press the ♠ button until the shade jogs, then release. Check new limit.



TO ADD A REMOTE/CHANNEL OR SUN AND WIND SENSOR

First press the programming button on the back of the already programmed remote until the motor jogs. Then press the programming button on the remote or sun/wind sensor that you would like to add until the motor jogs. Check it.

CL32 Cord Lift WireFree™ RTS Motor





To reset the CL32 motor back to factory settings:

- 1) Make sure motor is connected to a power source.
- Straighten a paper clip and insert into the Reset Port of motor (pictured left) and push in gently and hold until the motor jogs (slightly moves Up and Down) 3-Times then release.
- All travel limits and remote controllers are erased from motor
- 4) Follow the Programming Instructions to program the motor.

